

Product information presented here reflects conditions at time of publication. Consult factory regarding discrepancies or inconsistencies.


REPLACEMENT PARTS LIST FOR GRINDER MODELS:

- E819 NONAUTOMATIC 230V 1PH**
- I819 NONAUTOMATIC 200V 1PH**
- WD819 AUTOMATIC w/wired float switch 230V 1PH**
- WH819 AUTOMATIC w/wired float switch 200V 1PH**


Consult factory for all other models

TO ORDER REPLACEMENT PARTS:
PLEASE FURNISH THE FOLLOWING INFORMATION:

- Model Number.
- Part Number of Pump.
- Part Number and Description of part.

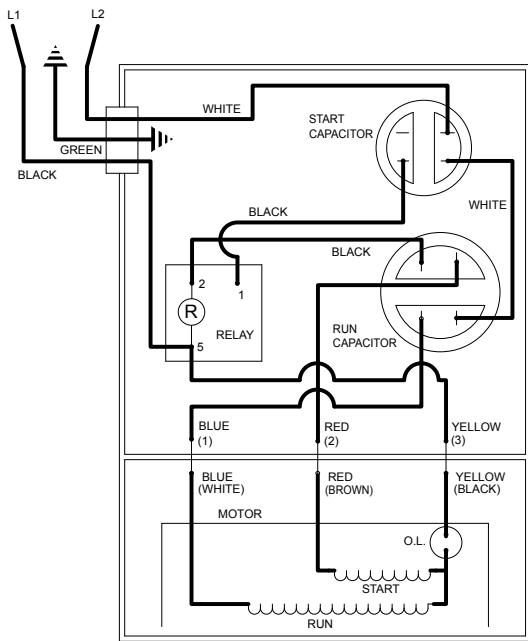

010443
 WIRING DIAGRAM FOR MODELS
 "E819", "I819"
 All Revisions

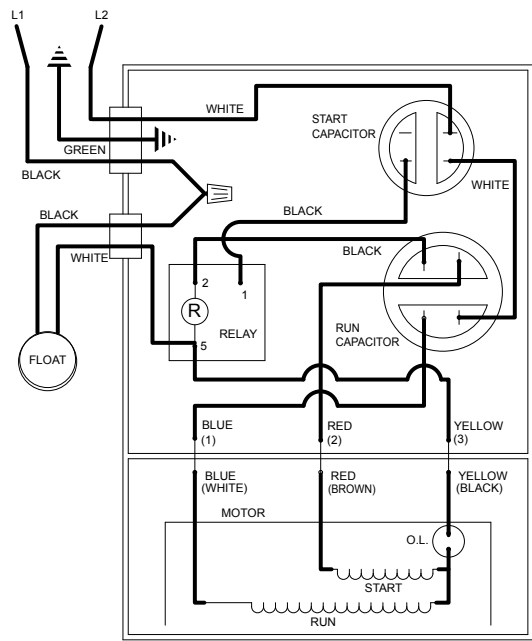

010415
 WIRING DIAGRAM FOR MODELS
 "WD819", "WH819"
 All Revisions

REPLACEMENT PARTS LIST FOR MODELS "E819" and "I819".

See back page for illustration.

REF NO.	DESCRIPTION	QTY	NOTE	MODELS:	
				E819-A	I819-A
				11/16 thru Current	11/16 thru Current
1	• HANDLE	1		217069	217069
2	COVER & CORD NONAUTO/"819"	1	3	154296	015609
3	COVER-MACH & HANDLE ASM	1	3	015612	015612
4	SWITCH,FLT-TERM & SEAL "819"	0		N/A	N/A
5	SEAL,CORD-FLOAT SWITCH	0		N/A	N/A
6	CORD TERM&SEAL	1	3	154297	015615
7	• SEAL,CORD-ASM&STR RLF	1	3	015634	015634
8	• GASKET,CASE/COVER	1		001011	001011
9	• WIRE PKG (6 WIRES)	1		010833	010833
10	CAPACITOR-START & CLAMP ASM.	1		010829	010829
11	CAPACITOR-RUN & CLAMP ASM	1		010830	010830
12	RELAY,MOTOR STARTING	1		014601	014601
13	• PLUG,TEST	2		015023	015023
14	• SEAL,THRU WALL TERM	3		003402	003402
15	HOUSING,MTR-&STR	1	4	018231	018232
16	• BEARING,6201	1		006703	006703
17	KEY	1		011711	011711
18	ROTOR & BRG ASM/1PH "819"	1		018230	018230
19	• BEARING,7303	1		009861	009861
20	• SEAL,MTR HSG	1		001014	001014
21	• OIL,DIELECTRIC	1		018233	018233
22	ADAPTER-MACH	1		001003	001003
23	• SEAL,SHAFT	1		002430	002430
24	WASHER,SUPPORT-SS	1		010863	010863
25	COLLAR,SHAFT	1		010409	010409
26	IMPELLER-PLASTIC "819"	1		153908	153908
27	HOUSING,PUMP-MACH "819"	1		154088	154088
28	CUTTER & DISC ASM./"819"	1		154292	154292
29	CUTTER SHIM SET	1		012632	012632
30	WASHER,RETAINING	1		008533	008533
31	CONNECTOR,WIRENUT 14-16GA	0		N/A	N/A
32	• SCREW,.25-20X.75" SH CAP SS	6		007768	007768
33	• SCREW,.25-20 X .75LG HH SS (NYLOCK)	1		009545	009545
34	• SCREW,.313-18 X 1" HH CAP-SS	4		002608	002608
35	• SCREW,.25-20X1" HHM-S.S.	4		007790	007790
36	• SCREW,.25-20X.75 HHM-SS/INDENTED/UNSLLOT	4		001916	001916
37	• SCREW,#6-32X.25RHM SL TC STLGR	5		001877	001877
38	• SPRING,BEARING PRELOAD	1		017192	017192
39	• SCREW,#6-32X.375RHM SL TC ZINC PLATED	1		019421	019421
40	DISC, CUTTER	1		153203	153203
41	CUTTER & SHIM ASM/2 BLADE/.75" SCREW	1		154295	154295
42	INSULATOR FLAG TERMINAL	3		001797	001797
☐	REBUILD KIT E & I "819"	1		018234	018234

- Items included in Rebuild Kit.
- ☐ Not Shown in Illustration.

NOTES:

- 1) See FM1267 Price Sheet for listing of parts prices.
- 2) "N/A" indicates, not applicable.
- 3) If an "X" follows Model No., or Date Mfg. on brass ID tag, consult factory for ordering of this part.
- 4) Housing, MTR & Stator (Item 15) is preassembled at factory and must be replaced as a unit. Stator is permanently attached to the Motor Housing. Plug (Item 13) and Seal, thru Wall Term. (Item 14) and Bearing (Item 16) are replaceable.

REPLACEMENT PARTS LIST FOR MODELS "WD819" and "WH819".

See back page for illustration.

REF NO.	DESCRIPTION	MODELS:		WD819-A	WH819-A
		QTY	NOTE	10/08 thru Current	10/08 thru Current
1	• HANDLE	1		217069	217069
2	COVER,CORD & FLT	1		154301	015611
3	COVER-MACH & HANDLE ASM	1	3	015613	015613
4	SWITCH,FLT-TERM & SEAL "819"	1	3	010827	011880
5	• SEAL,CORD-FLOAT SWITCH	1		011065	011071
6	CORD TERM & SEAL	1	3	154308	015633
7	• SEAL,CORD-ASM&STR RLF	1	3	015634	015634
8	• GASKET,CASE/COVER	1		001011	001011
9	• WIRE PKG (6 WIRES)	1		010833	010833
10	CAPACITOR-START & CLAMP ASM.	1		010829	010829
11	CAPACITOR-RUN & CLAMP ASM	1		010830	010830
12	RELAY,MOTOR STARTING	1		014601	014601
13	• PLUG,TEST	2		015023	015023
14	• SEAL,THRU WALL TERM	3		003402	003402
15	HOUSING,MTR-&STR	1	4	018231	018231
16	• BEARING,6201	1		006703	006703
17	KEY	1		011711	011711
18	ROTOR & BRG ASM/1PH "819"	1		018230	018230
19	• BEARING,7303	1		009861	009861
20	• SEAL,MTR HSG	1		001014	001014
21	• OIL,DIELECTRIC	1		018233	018233
22	ADAPTER-MACH	1		001003	001003
23	• SEAL,SHAFT	1		002430	002430
24	WASHER,SUPPORT-SS	1		010863	010863
25	COLLAR,SHAFT	1		010409	010409
26	IMPELLER-PLASTIC "819"	1		153908	153908
27	HOUSING,PUMP-MACH "819"	1		154088	154088
28	CUTTER & DISC ASM./"819"	1		154292	154292
29	CUTTER SHIM SET	1		012632	012632
30	WASHER,RETAINING	1		008533	008533
31	• CONNECTOR,WIRENUT 14-16GA	1		003753	003753
32	• SCREW,.25-20X.75" SH CAP SS	6		007768	007768
33	• SCREW,.25-20 X .75LG HH SS (NYLOCK)	1		009545	009545
34	• SCREW,.313-18 X 1"HH CAP-SS	4		002608	002608
35	• SCREW,.25-20X1" HHM-S.S.	4		007790	007790
36	• SCREW,.25-20X.75 HHM-SS/INDENTED/UNSLOTTED	4		001916	001916
37	• SCREW,#6-32X.25RHM SL TC STLGR	5		001877	001877
38	• SPRING,BEARING PRELOAD	1		017192	017192
39	• SCREW,#6-32X.375RHM SLTC ZINC	1		019421	019421
40	DISC, CUTTER	1		153203	153203
41	CUTTER & SHIM ASM/2 BLADE/.75" SCREW	1		154295	154295
42	INSULATOR FLAG TERMINAL	3		001797	001797
▣	REBUILD KIT WD & WH "819"	1		018234	018234


• Items included in Rebuild Kit.

▣ Not Shown in Illustration.

NOTES:

- 1) See FM1267 Price Sheet for listing of parts prices.
- 2) "N/A" indicates, not applicable.
- 3) If an "X" follows Model No., or Date Mfg. on brass ID tag, consult factory for ordering of this part.
- 4) Housing, MTR & Stator (Item 15) is preassembled at factory and must be replaced as a unit. Stator is permanently attached to the Motor Housing. Plug (Item 13) and Seal, thru Wall Term. (Item 14) and Bearing (Item 16) are replaceable.

REPLACEMENT PARTS ILLUSTRATION FOR 819 - ALL MODELS

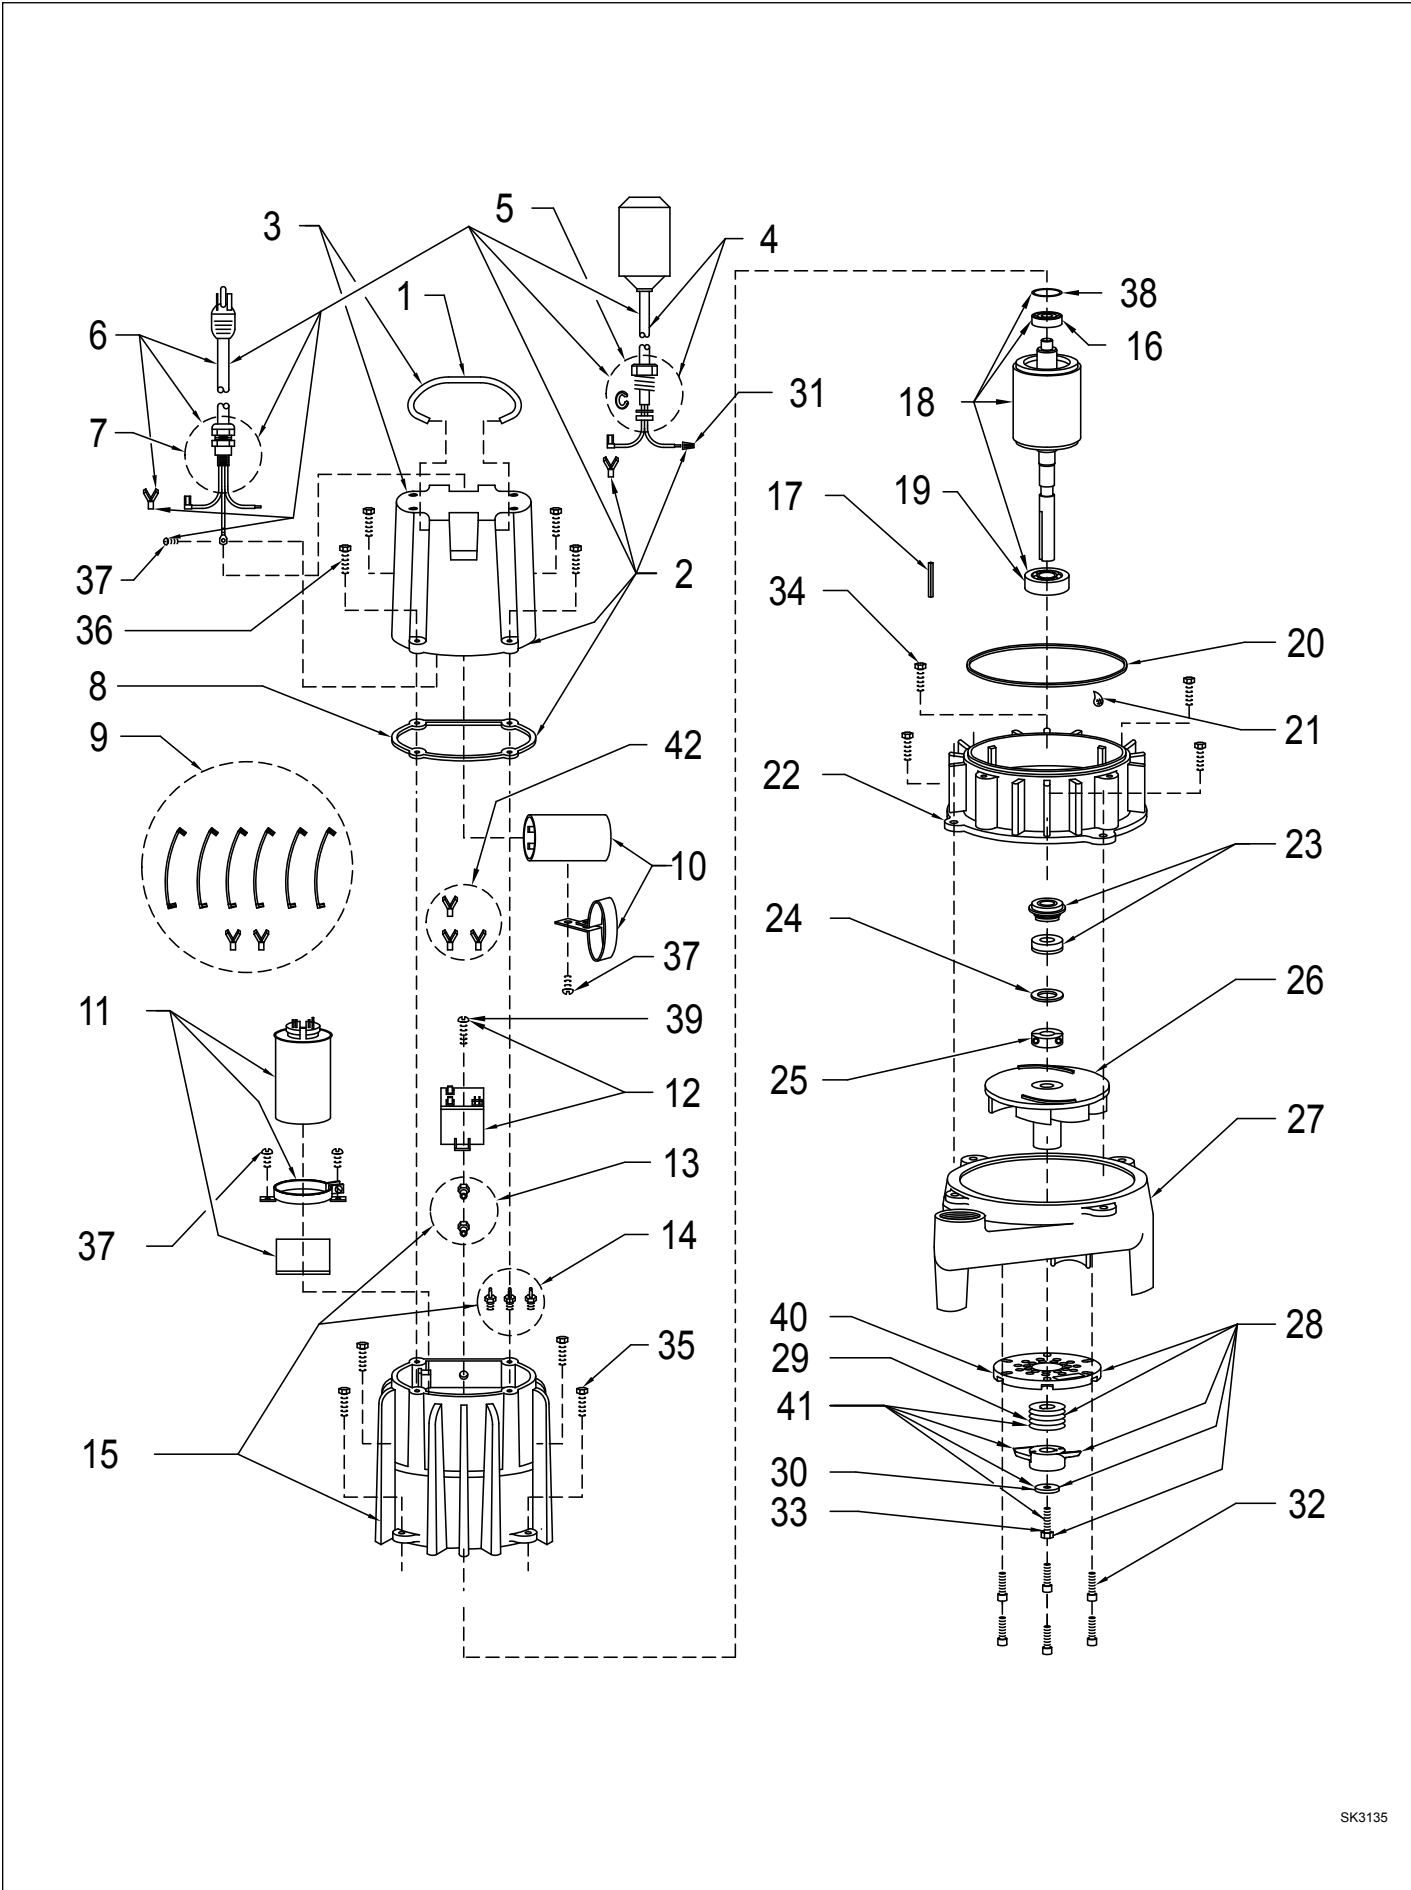

SK3135